



Model: 24111

⚠ WARNING

To Prevent SERIOUS INJURY or DEATH:


- Keep transmitter and battery out of reach of children.
- NEVER permit children to access the Push Button nor remote transmitters.
- Operate door ONLY when it is adjusted properly with no obstructions to door travel and is in clear sight.
- ALWAYS keep a moving door in sight until completely closed. NO ONE should cross the path of a moving door.



To reduce risk of fire, explosion or electric shock:

- DO NOT short circuit, recharge, disassemble or heat battery
- Replace with 9V batteries ONLY. Dispose of batteries properly.

Setting Keyless Entry

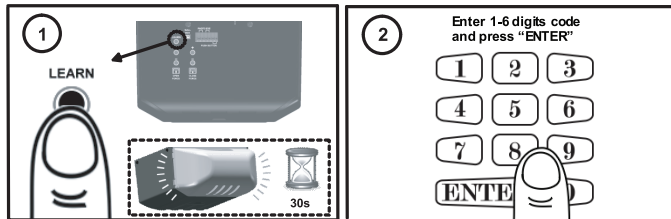

To Add Personal Code:

1. Press/release "LEARN" button on the rear control panel, the courtesy light will glow with click*. The unit is ready to accept a transmitter in the coming 30 seconds.
2. Enter 1 - 6 digit(s) personal code on Keyless Entry within 30 seconds and press/release "ENTER" button.
3. Courtesy light flashes twice indicating personal code is stored in memory.

Up to 20 personal codes (including 1-button transmitters) can be added to the unit by repeating the above procedures.

If more than 20 personal codes are stored, the previously stored one from the very beginning will be replaced, i.e. the 21st transmitter replaces the 1st stored one.

* If the courtesy light is already on it will flash once and stay steadily for 30 seconds.

Operation:


To access the door, enter a pre-stored personal code and press "ENTER" to transmit code, and within 20s, "ENTER" button can be used to stop or reverse the door.

If code is entered wrongly, correction can be made by pressing "ENTER" to reset and re-enter code.

During nighttime, "ENTER" may be pressed in advance to turn on backlit.

Removing ALL Personal Code(s):

To remove ALL personal code(s) and /or transmitters from memory, press and hold the "LEARN" button above 5 seconds. The courtesy light will flash 7 times, indicating ALL codes/transmitters have been removed from memory.

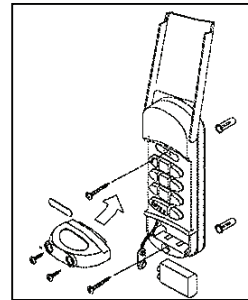

Mounting the Keyless Entry:

On door jamb face outside your garage, locate Keyless Entry within sight of door at minimum height of 5 feet (1.5m), ensure it is away from reach of children and moving parts of door and hardware. Test the reception of the Keyless Entry before mounting. Change location for better reception if necessary.

Use the mounting holes on the Keyless Entry as template to mark position on the mounting surface. On wooden use the screws provided. In case of drywall surface, drill holes and use drywall anchors provided.

Replacing Keyless Entry Battery:

When the battery of Keyless Entry is low, dimmed illumination is observed. To replace battery, remove the battery cover by loosening the screws underneath, replace the battery with a 9V battery.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

Decko Products warrants, to the first purchaser of this product, for the initial residence in which it is installed, to be free from defects in materials and or workmanship for a period of 1 YEAR from date of purchase. As the sole and exclusive remedy for a breach of this limited warranty, if the product is found by Decko Products to be defective, Decko Products, at its option, will repair or replace the product with an equivalent product if it is returned to the place of purchase or returned with proof of purchase post paid to

**Decko Products,
ATTN: Warranty Dept.,
2301 Traffic St. NE
Minneapolis, MN 55413**

**ANY DISASSEMBLY, MODIFICATION, OR ABUSE OF THIS PRODUCT
VOIDS THIS LIMITED WARRANTY.**

**DECKO DISCLAIMS ALL OTHER EXPRESS OR IMPLIED WARRANTIES,
INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR
A PARTICULAR PURPOSE.**

**THIS LIMITED WARRANTY DOES NOT COVER BATTERIES OR ANY
PROBLEMS WITH OR RELATED TO THE GARAGE DOOR OR GARAGE
DOOR HARDWARE. THIS INCLUDES BUT IS NOT LIMITED TO THE
DOOR SPRINGS, DOOR ROLLERS, DOOR ALIGNMENT OR DOOR
HINGES.**

**DECKO PRODUCTS SHALL NOT BE LIABLE FOR CONSEQUENTIAL
OR INCIDENTAL DAMAGES THAT ARISE IN CONNECTION WITH USE,
OR INABILITY TO USE THIS PRODUCT.**

Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Customer Service:
www.deckogdo.com
1-877-GDO-4402
1-877-436-4402

This device complies FCC Rules for HOME OR OFFICE USE.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.